 




Treely Air

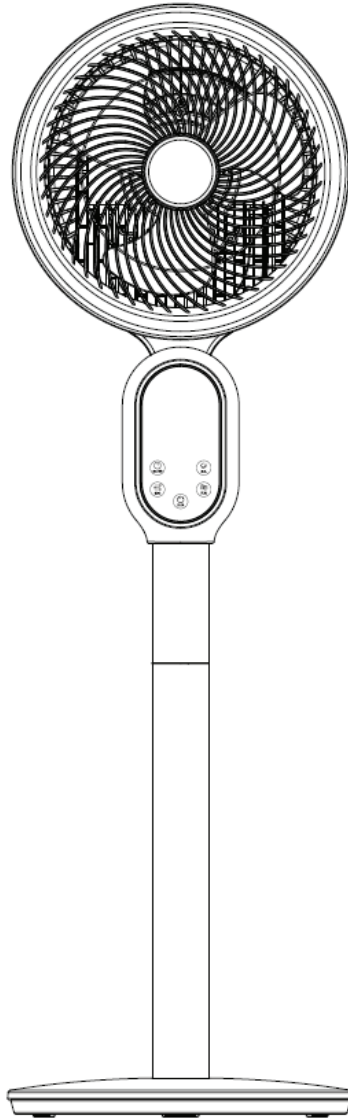

 
The Treely Fan

Model: TF-01

User Manual

Please carefully read this user manual before use and keep it properly!
This product is intended for use in domestic only.


Product Introduction

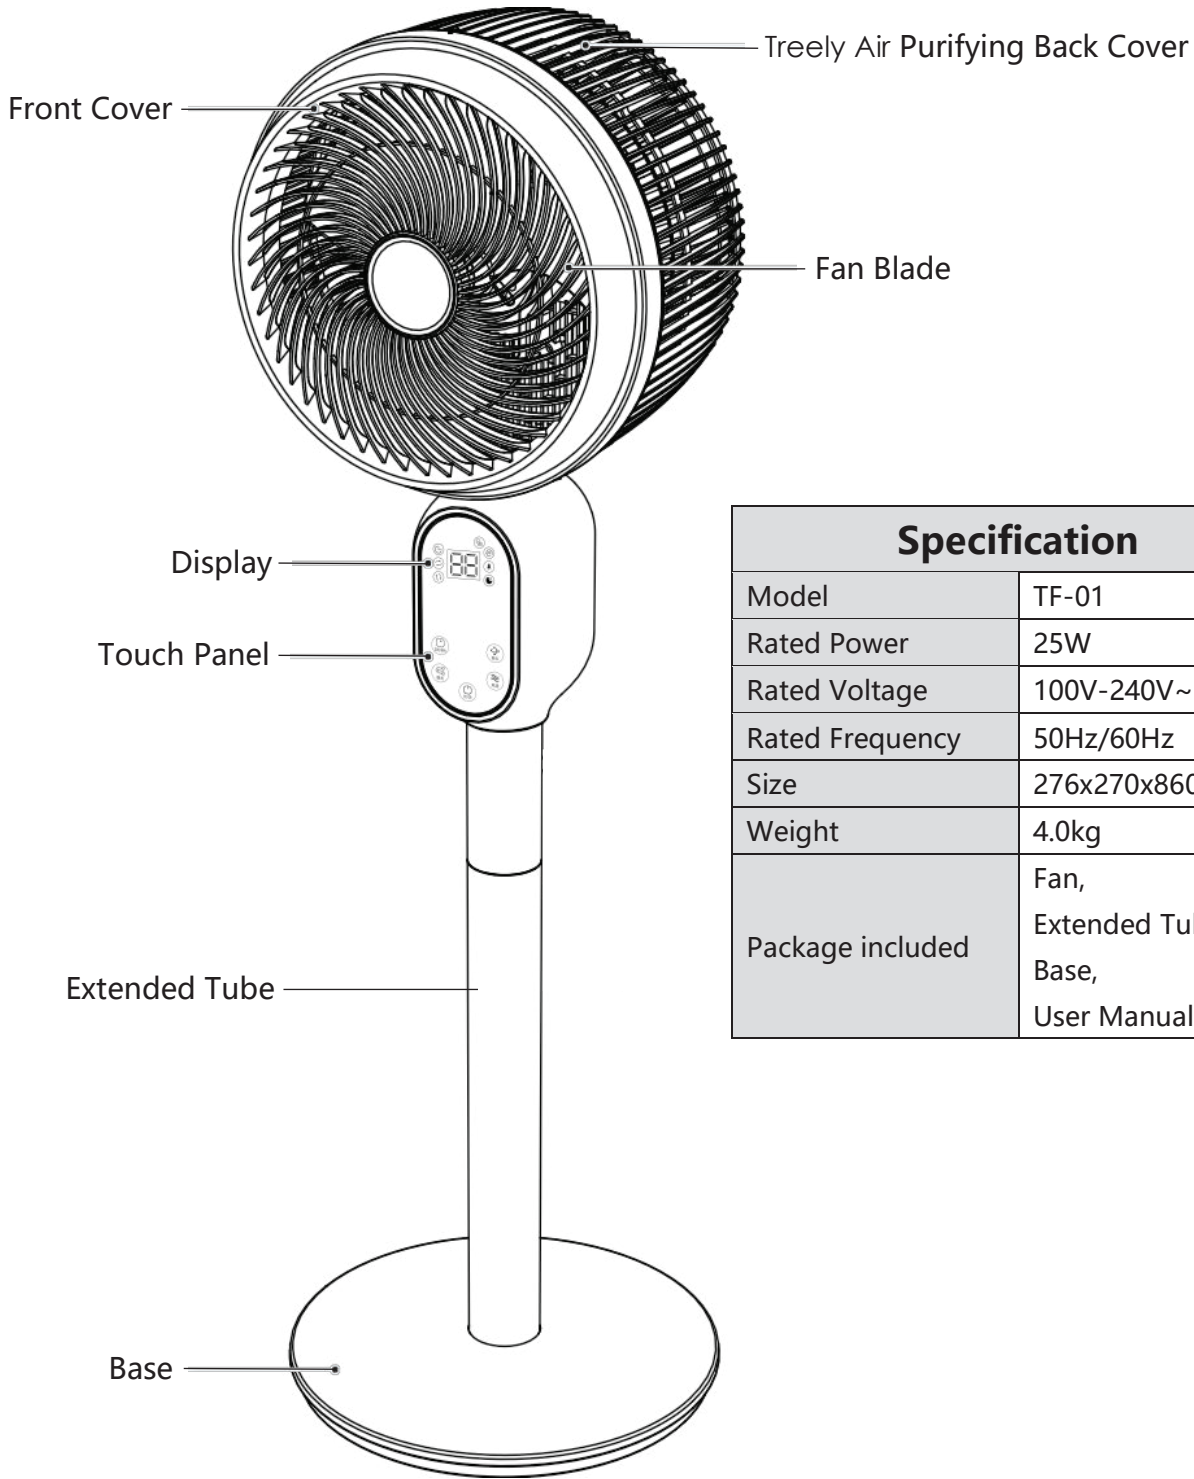

Specification	
Model	TF-01
Rated Power	25W
Rated Voltage	100V-240V~
Rated Frequency	50Hz/60Hz
Size	276x270x860mm
Weight	4.0kg
Package included	Fan, Extended Tube, Base, User Manual



 Panel and Remote

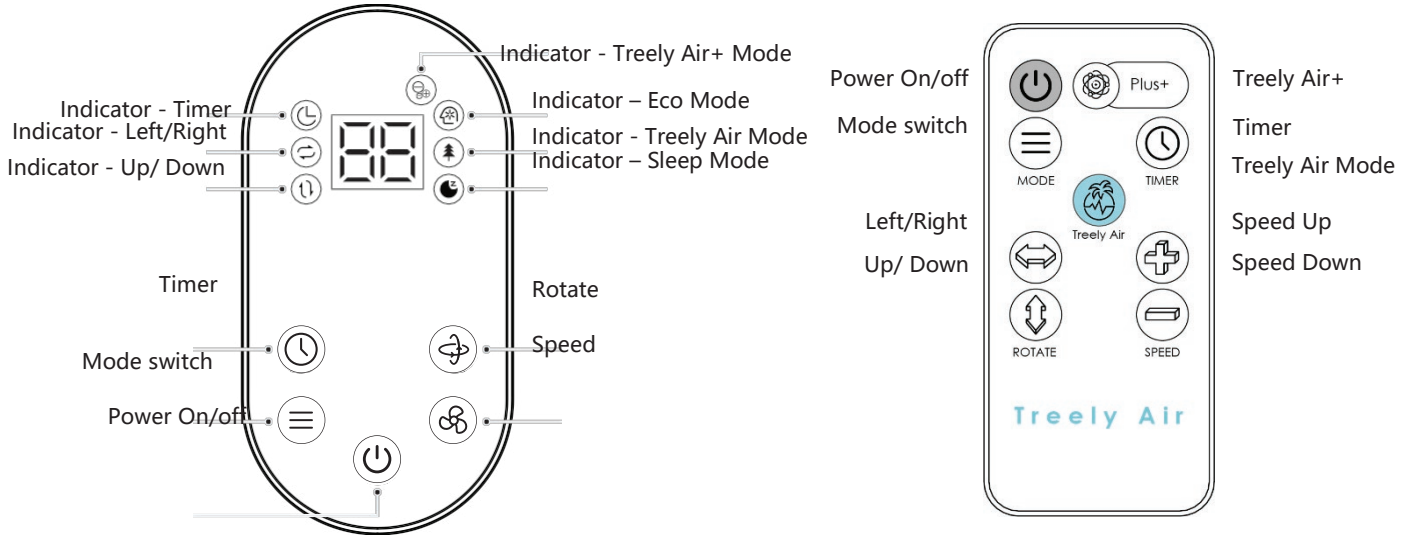

Operations Instruction

Functions	Touch Panel	Remote
Power On	Connect the power plug to the power source and press the power button.	Connect the power plug to the power source and press the power button.
Off & Standby	Press the power button when the fan is operating.	Press the power button when the fan is operating.
Speed	Press the speed button to increase the speed, cycling from 1 to 12; you can also hold the speed button to quickly adjust to the maximum speed to 12.	Press the wind speed "+" button, the speed will increase with each press up to a maximum of 12; Press the speed "-" button, the speed will decrease with each press down to a minimum of 1.
Rotate	Press the oscillation button to switch between left-right oscillation, up-down oscillation, 3D oscillation, and no oscillation.	Press the left-right rotation button, the fan will oscillate left and right, press again to stop the oscillation; Press the up-down swing button, the fan will oscillate up and down, press again to stop the oscillation.
Treely Air	Press the mode switch button until the indicator light for the Treely Air mode is on.	Press the Treely Air mode button on, press again to exit the mode.
Treely Air+	(N/A)	After initiating the Treely Air mode, press left-right and up-down oscillation, also press the Treely Air+ mode button, press again to stop all the operations.
Mode Switch	Press the mode switch button to toggle between normal mode, Treely Air mode, sleep mode and ECO mode.	Press the mode switch button to toggle between normal mode, Treely Air mode, sleep mode and ECO mode.
Timer	Press the timer button to set the timer function, with each press adding 1 hour.	Press the timer button to set the timer function, with each press adding 1 hour.



Clean and Maintenance

1. Always unplug before cleaning or maintaining this product and wait until the device has cooled down completely before cleaning.
2. Do not use solvents such as toluene, bleach, or hard brushes to avoid scratching and corroding the machine's exterior color. If there are stubborn stains or dirt, it is recommended to use a neutral detergent.
3. The fan blades are crucial components. Whether installing, disassembling, cleaning, or using, handle them carefully to prevent deformation.
4. When operating the various functions and buttons, please act gently.
5. The grease or dust on the fan should be cleaned promptly. Do not use gasoline or strong alkali solution to clean, as it may damage the paint on the surface.
6. If the fan overheats, emits a burning smell, or slows down during use, turn off the power immediately and check.
7. Before storing the fan, thoroughly clean the surface grease and dust with a dry soft cloth, then cover it with a non-woven or cloth bag. It is recommended to store it in a dry and well-ventilated place and avoid crushing.
8. Do not rinse the main unit directly with water to prevent electrical short circuits or poor conductivity.

Note: The axis of the motor in this product does not require additional oiling maintenance. Please do not spray maintenance oil by yourself.



Use of Remote

1. When using the remote control for the first time, please remove the film from the battery compartment.
2. If the remote control does not work, please replace it with a new battery, and install them according to the positive and negative indications. Incorrect installation will cause battery leakage and corrosion, and may damage the remote control.
3. Do not attempt to modify, short-circuit, or disassemble the batteries, as this could be dangerous.
4. If the remote control will not be used for a long time, please remove the battery to prevent battery leakage.

Replace remote's battery as follow:



1.Take out the battery

2.Replace a new one

3.Close the Compartment



Safety Guideline

Operation and Maintenance

1. Non-professionals or unauthorized repair personnel should not attempt to repair or modify this machine by themselves.
2. If the power cord is damaged, to avoid any danger, it must be replaced by professionals from the manufacturer.
3. If there are sparks, smoke, or strange smells, stop using this product immediately and unplug it.
4. Unplug the power cord if not in use for a long period.
5. Do not disassemble or modify this product by yourself.
6. Do not touch this product with wet hands or wipe it with water to avoid damage to components caused by water.
7. Before moving or maintaining the fan, please unplug the power cord.
8. When unplugging the power cord, hold and pull the plug, not the cord.
9. Ensure the fan is disconnected from the power supply before removing the protective cover.

Usage Environment

1. Do not place this machine on a slant or unstable surface to prevent the machine from falling and causing damage to the body or internal parts.
2. Do not place the electric fan where children can reach it.
3. Do not use this product in an environment with flammable or explosive gases.
4. Place it away from stoves, heaters, and other heat sources, and avoid direct sunlight.
5. Do not place it in a damp area while in use.



Cautions

1. Before use, please read all the instructions in this manual carefully; check that the voltage you're using matches the voltage indicated on this machine; and place the product out of the reach of children.
2. Avoid sharing the same outlet with other electronic products; keep the power cord, plug, and body of the device dry.
3. If sparks, smoke, or strange smells occur, immediately unplug the fan and stop using it.
4. Do not attempt to open the body of this product or disassemble and modify it yourself.
5. Do not touch this product with wet hands or wipe it with water to avoid causing damage to parts.
6. Do not pour or insert abnormal items such as liquids or metals into this product.
7. Do not place it in humid or high-temperature places such as a heated room when in use.
8. Do not operate this product on an unstable location.
9. Pay special attention to children and ensure they do not insert fingers or sticks into the front cover or rear grid.
10. When unplugging the power cord, hold the plug, not the cord. Do not forcefully pull the power cord.
11. If you're not using it for a long time or if you're going out, be sure to unplug it to avoid standby power consumption.

Warning: If the power cord is damaged, it must be replaced by the manufacturer or other professionally qualified personnel to avoid danger. Unplug the device from the power source before disassembling. Under no circumstances should this product be immersed in water.

